



0 24847 08975 2

FORM MS-2271-12/04/2007  
REPLACES FORM MS-2271-09/07/2007  
FILE IN SECT. 2 OF SERVICE MANUAL

**12L800**

# **Illustrated Parts List**

## **Model Series**

# **12L800**

TYPE NUMBERS  
0805 through 3104.

### **TABLE OF CONTENTS**

<b>Alternator</b>	7
<b>Air Cleaner</b>	4
<b>Blower Housing/Shrouds</b>	6
<b>Camshaft</b>	2
<b>Carburetor</b>	3
<b>Controls</b>	5
<b>Crankshaft</b>	2
<b>Cylinder</b>	2
<b>Electric Starter</b>	7
<b>Electrical</b>	7
<b>Engine Sump</b>	2
<b>Exhaust System</b>	4
<b>Flywheel</b>	7
<b>Flywheel Brake</b>	7
<b>Fuel Supply</b>	5
<b>Governor Spring</b>	5
<b>Ignition</b>	7
<b>Kits/Gaskets</b>	2 & 3
<b>Lubrication</b>	2
<b>Piston Group</b>	2
<b>Rewind Starter</b>	6
<b>Valves</b>	2



**BRIGGS & STRATTON**

®

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted,  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.

**12L800**



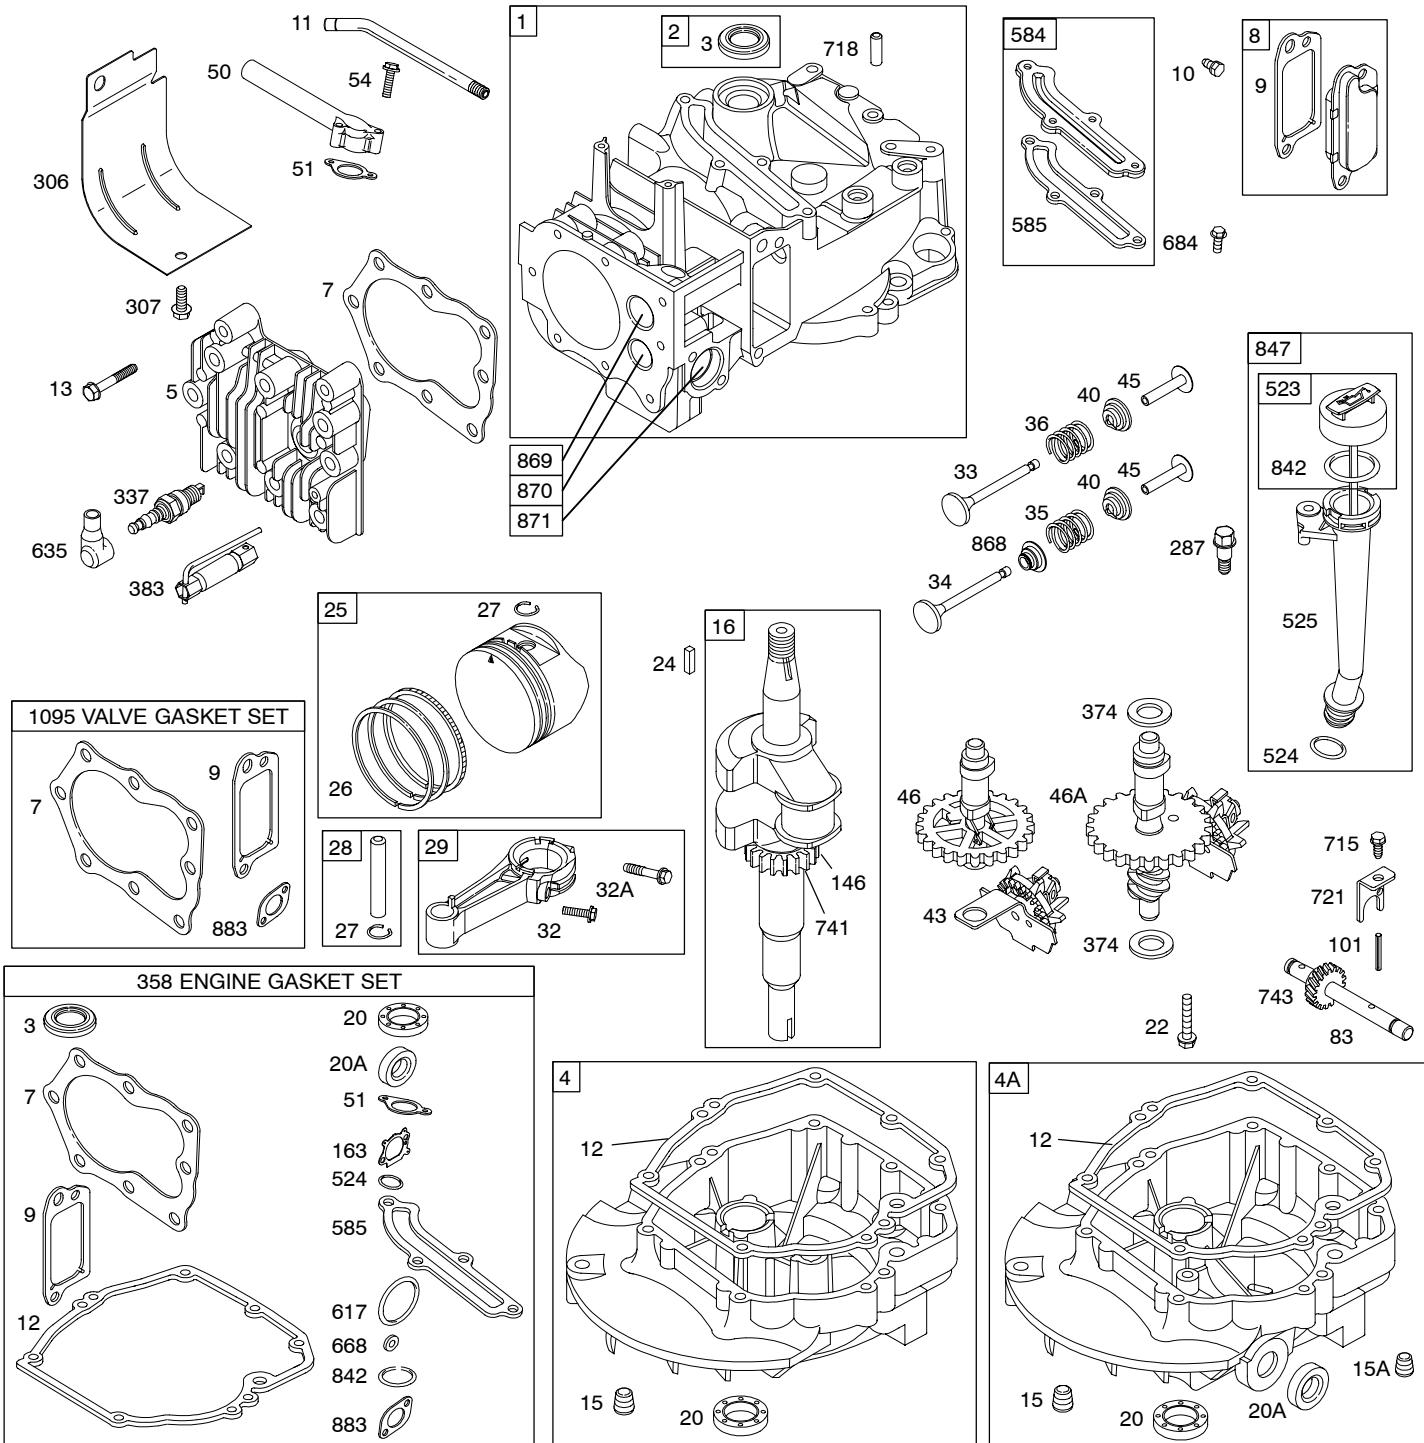
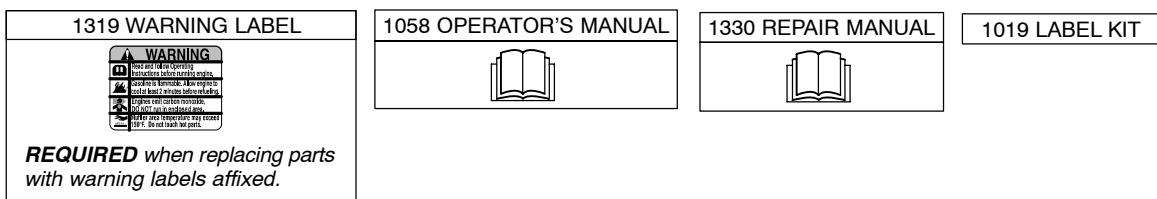


**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**




2271-2

Assemblies include all parts shown in frames.

12/04/2007

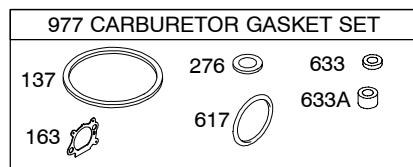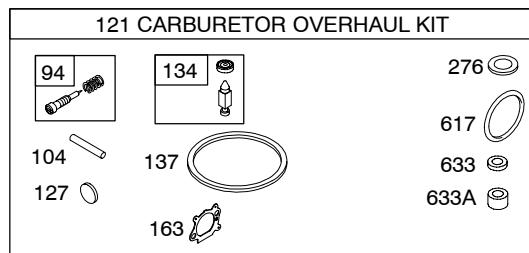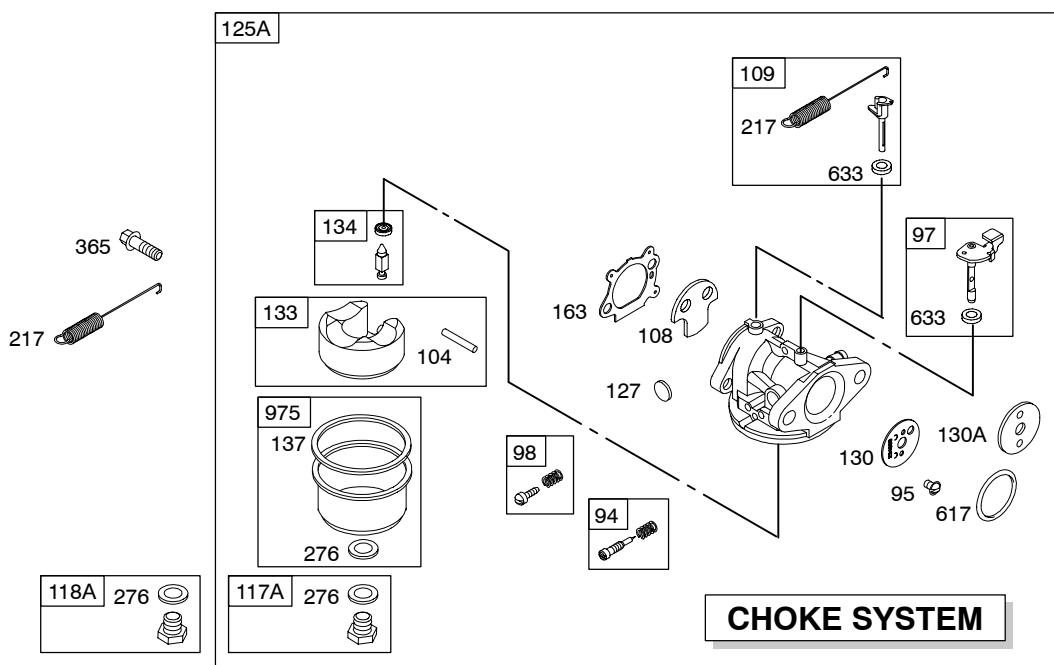
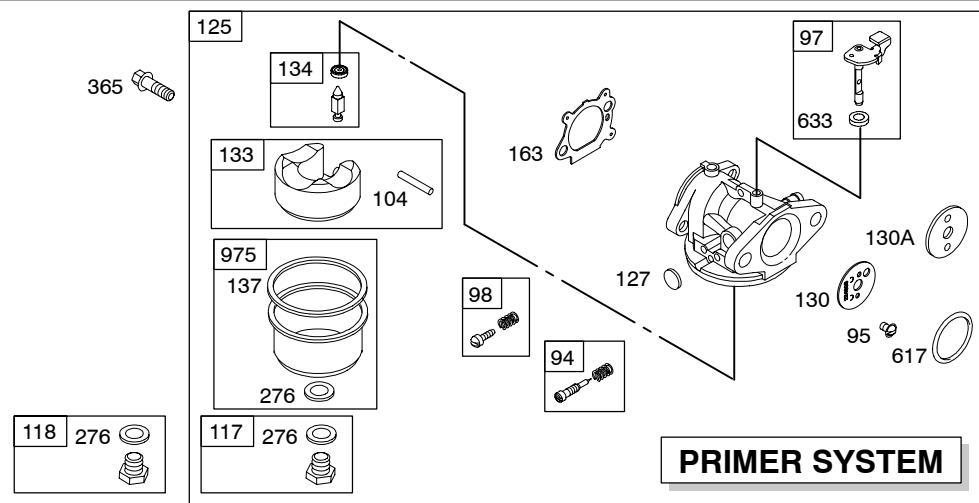


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
2271-3 Assemblies include all parts shown in frames.

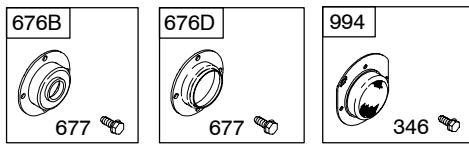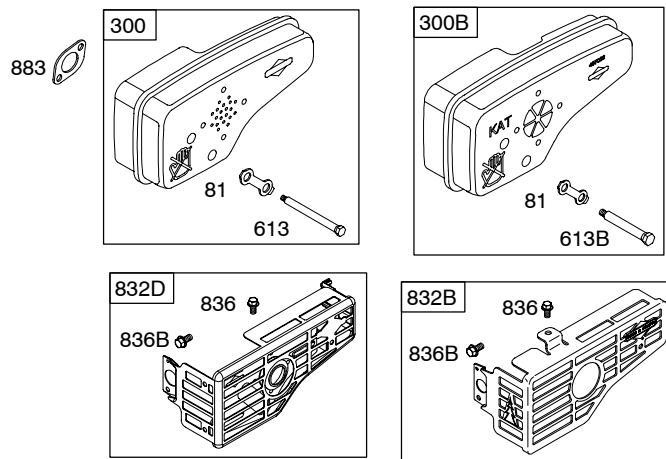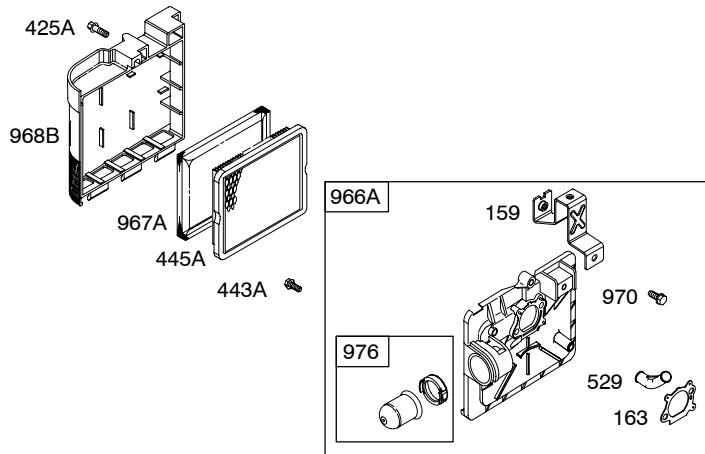

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
2271-4      Assemblies include all parts shown in frames.







12/04/2007

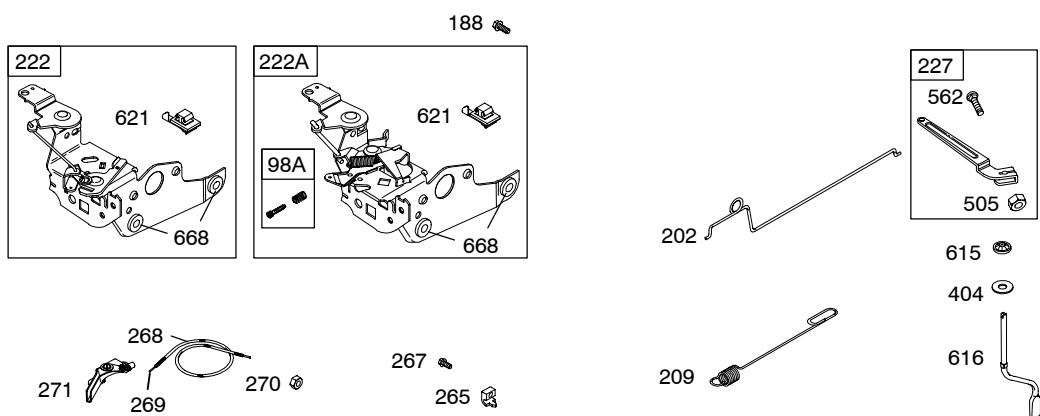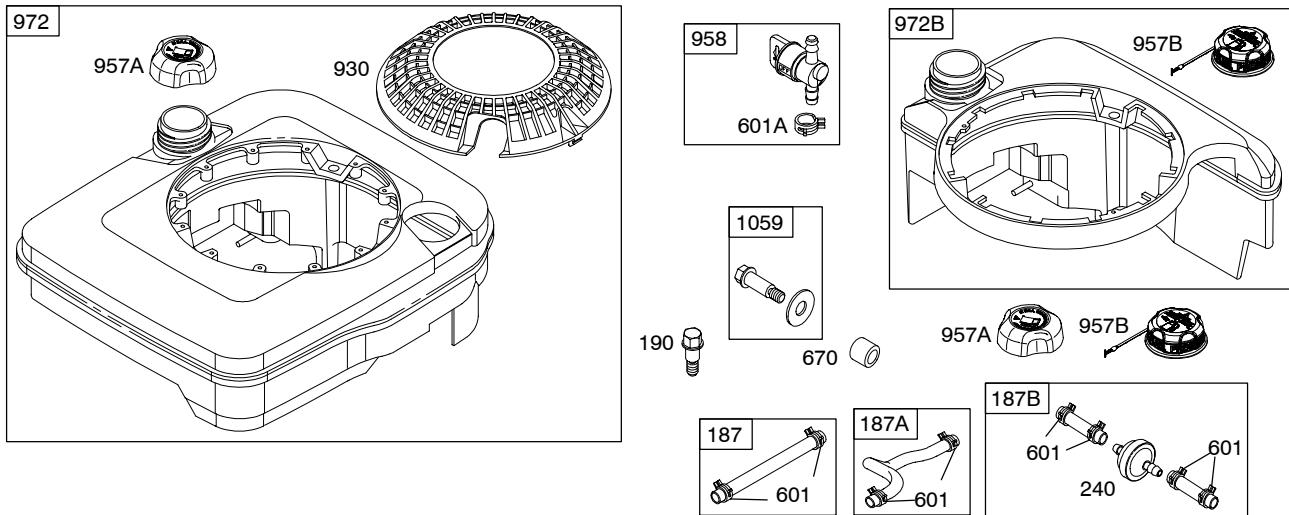

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
2271-5 Assemblies include all parts shown in frames.





12/04/2007

# 12L800

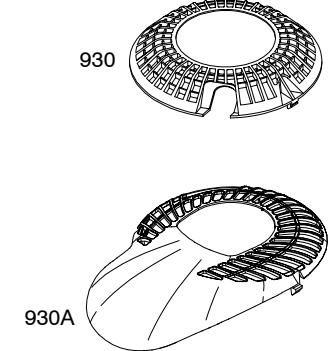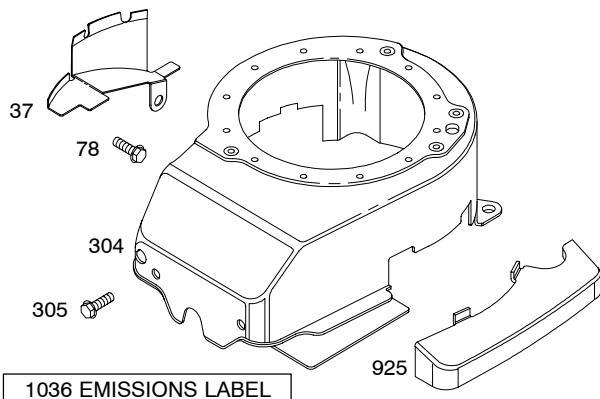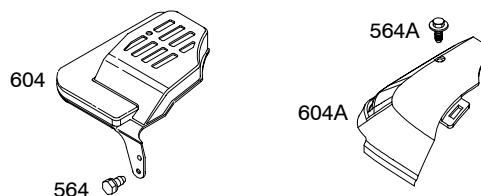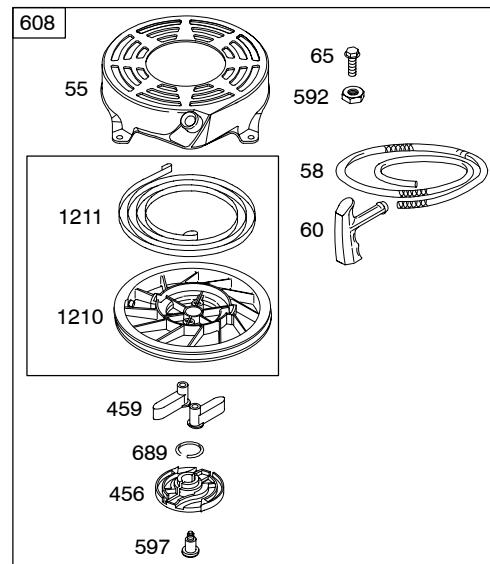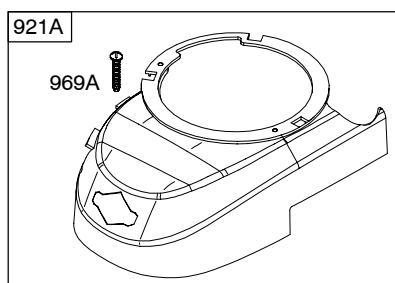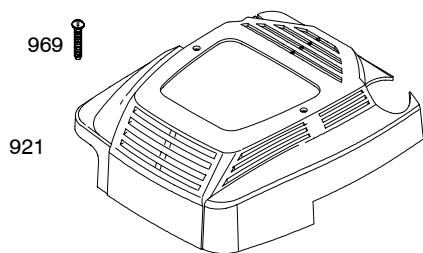

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
2271-6 Assemblies include all parts shown in frames.

12/04/2007

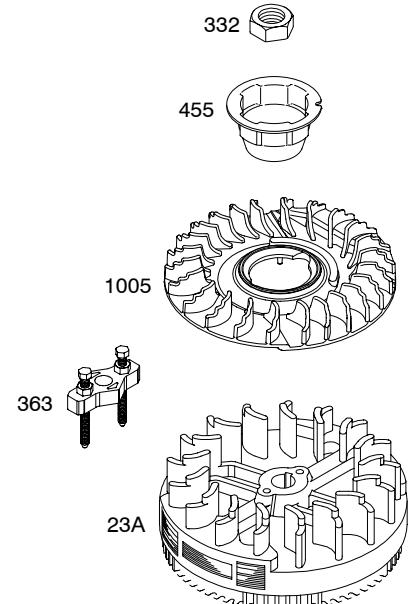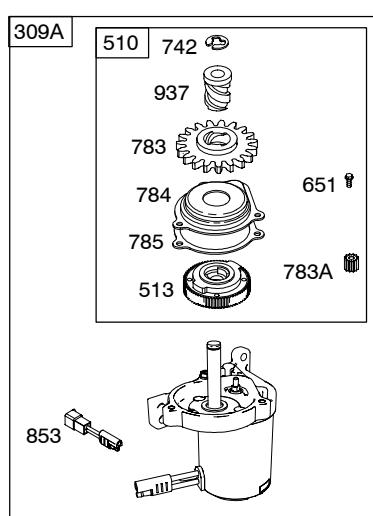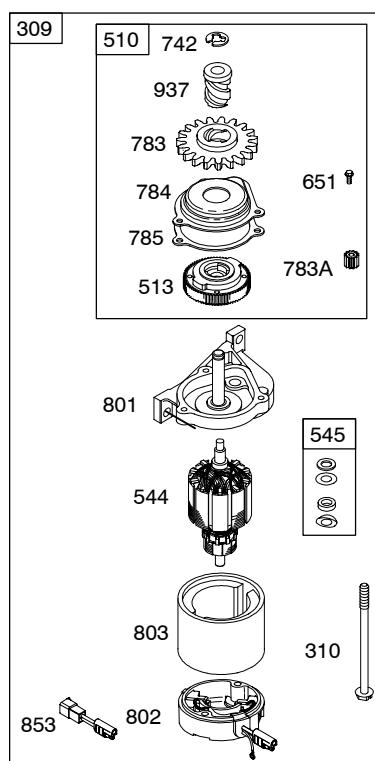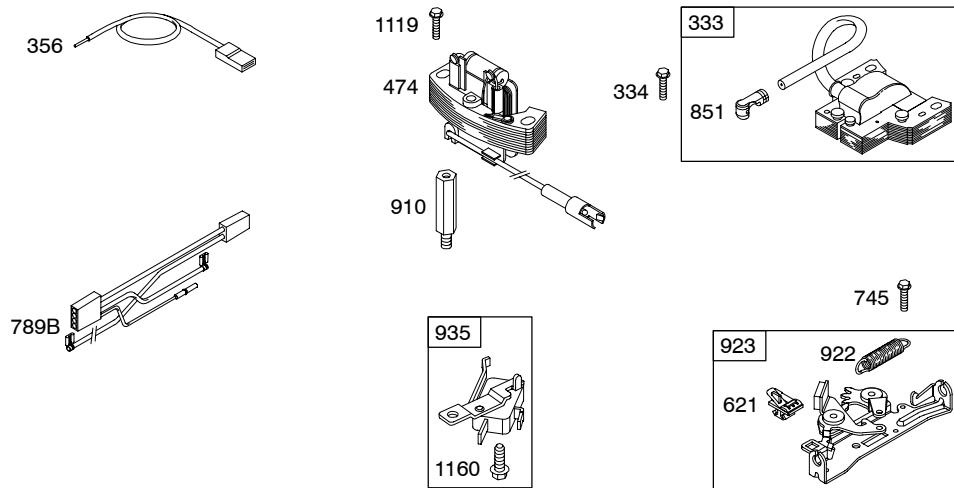

# 12L800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	697324	Cylinder Assembly	25	795429	Piston Assembly (Standard) (Used After Code Date 07090300).	27	691866	Lock-Piston Pin		
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	28	499423	Pin-Piston (Standard)		
3	★299819S	Seal-Oil (Magneto Side)			791096 Piston Assembly (Standard)	29	499424	Rod-Connecting (Standard)		
4	493279	Sump-Engine			(Used Before Code Date 07090400).	32	691664	Screw (Connecting Rod)		
4A	493365	Sump-Engine (Auxilliary PTO)			795430 Piston Assembly (.020" Oversize)	32A	695759	Screw (Connecting Rod) (Used After Code Date 00042200).		
5	691160	Head-Cylinder			(Used After Code Date 07090300).	33	262651S	Valve-Exhaust		
7	★Ø692249	Gasket-Cylinder Head			791325 Piston Assembly (.020" Oversize)	34	262652S	Valve-Intake		
8	695250	Breather Assembly			(Used Before Code Date 07090400).	35	691270	Spring-Valve (Intake)		
9	★Ø699833	Gasket-Breather			26	795431	Ring Set (Standard)	36	691270	Spring-Valve (Exhaust)
10	94650	Screw (Breather Assembly)			(Used After Code Date 07090300).	37	694086	Guard-Flywheel		
11	691781	Tube-Breather			----- Note -----	40	692194	Retainer-Valve		
12	★692232	Gasket-Crankcase			791098 Ring Set (Standard)	43	691997	Slinger-Governor/Oil		
13	690912	Screw (Cylinder Head)			(Used After Code Date 04031400 and Before Code Date 07090400).	45	690548	Tappet-Valve		
15	691680	Plug-Oil Drain (Square Socket)			499425 Ring Set (Standard)	46	691449	Camshaft		
15A	691093	Plug-Oil Drain (Hex Socket)			(Used Before Code Date 04031500).	46A	691459	Camshaft		
16	691454	Crankshaft			795432 Ring Set (.020" Oversize)	45	690548	Tappet-Valve		
		----- Note -----			(Used After Code Date 07090300).	50	497465	Manifold-Intake		
		691451 Crankshaft Used on Type No(s). 0806, 1507, 1508, 1509, 1562.			499427 Ring Set (.020" Oversize)	51	★272199S	Gasket-Intake		
		691452 Crankshaft Used on Type No(s). 0805, 1505, 1506, 2304, 2604, 3104.			(Used Before Code Date 04102200).	54	691650	Screw (Intake Manifold)		
20	★399781S	Seal-Oil (PTO Side)			791324 Ring Set (.020" Oversize)	55	691421	Housing-Rewind Starter		
20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)			(Used After Code Date 04102100 and Before Code Date 07090400).	58	280399S	Rope-Starter (Cut To Required Length)		
22	691092	Screw (Crankcase Cover/Sump)			499427 Ring Set (.020" Oversize)	60	281434S	Grip-Starter Rope		
23A	691987	Flywheel			(Used Before Code Date 04102200).	65	690837	Screw (Rewind Starter)		
		----- Note -----			791108	691108	Screw (Flywheel Guard)			
		691992 Flywheel Used on Type No(s). 0805, 0806.			81	691740	Lock-Muffler Screw			
24	222698S	Key-Flywheel			83	691778	Shaft-Auxiliary Drive			
					94	●493765	Kit-Idle Mixture			
					95	691636	Screw (Throttle Valve)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
2271-8 Assemblies include all parts shown in frames. 12/04/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)	121	498260	Kit-Carburetor Overhaul	209	691292	Spring-Governor ----- Note ----- 691835 Spring-Governor
98	398185	Kit-Idle Speed (Carburetor)	125	698444	Carburetor (Primer System)			Used on Type No(s). 0805, 0806, 1505, 1506, 1507, 1508.
98A	493280	Kit-Idle Speed	125A	498964	Carburetor (Choke System) (Used After Code Date 96060200).			262663 Spring-Governor
101	691623	Pin-Shaft			----- Note -----			Used on Type No(s). 1509, 1562.
104	•691242	Pin-Float Hinge	497353		Carburetor (Choke System)	217	690354	Spring-Choke Return
108	691182	Valve-Choke			(Used Before Code Date 96060300).	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)
109	494218	Shaft-Choke	127	•694468	Plug-Welch	222A	692021	Bracket-Control (Remote Choke A Matic,Non Compliance)
117	494870	Jet-Main (Standard) (Used After Code Date 02092900). ----- Note ----- 498975 Jet-Main (Standard) (Used Before Code Date 02093000).	130	691203	Valve-Throttle ----- Note ----- 696564 Valve-Throttle (Used With Plastic Throttle Shaft)	227	690783	Lever-Governor Control
117A	498976	Jet-Main (Standard) (Used After Code Date 96060200). ----- Note ----- 496063 Jet-Main (Standard) (Used Before Code Date 96060300).	130A	691181	Valve-Throttle	240	298090S	Filter-Fuel
			133	398187	Float-Carburetor	265	690798	Clamp-Casing
			134	•398188	Kit-Needle/Seal	267	691044	Screw (Casing Clamp)
			137	•693981	Gasket-Float Bowl	268	691025	Casing-Control Wire (Cut to Required Length)
			146	690979	Key-Timing	269	691026	Wire-Control (Cut to Required Length)
			159	691753	Bracket-Air Cleaner Primer	270	691027	Nut (Control Wire Casing)
			163•272653		Gasket-Air Cleaner	271	691028	Lever-Control
			187	791766	Line-Fuel (Cut to Required Length)	276	•271716	Washer-Sealing
118	497315	Jet-Main (High Altitude) (Used After Code Date 02092900). ----- Note ----- 496495 Jet-Main (High Altitude) (Used Before Code Date 02093000).	187A	791873	Line-Fuel (Molded)	287	690940	Screw (Dipstick Tube)
			187B	791891	Line-Fuel (Includes Filter) (Used After Code Date 05063000). ----- Note ----- 692042 Line-Fuel (Includes Filter) (Used Before Code Date 05070100).	300	496106S	Muffler (Tuned)
118A	498977	Jet-Main (High Altitude) (Used After Code Date 96060200). ----- Note ----- 497315 Jet-Main (High Altitude) (Used Before Code Date 96060300).	188	690877	Screw (Control Bracket)	300B	497681	Muffler (Catalyst)
			190	690940	Screw (Fuel Tank)	304	493293	Housing-Blower ----- Note ----- 493294 Housing-Blower
			202	691829	Link-Mechanical Governor			Used on Type No(s). 0805, 0806.

★ Included in Engine Gasket Set-Ref. No.358.

- Included in Engine Gasket Set Ref. No. 655.
- Included in Carburetor Overhaul Kit-Ref. No. 121.

- ♦ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

2271-9

Assemblies include all parts shown in frames.

12/04/2007

# 12L800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	513	692358	Clutch-Drive	668	★493823	Spacer
306	690450	Shield-Cylinder	523	499621	Dipstick	670	692294	Spacer-Fuel Tank
307	690345	Screw (Cylinder Shield)	524	★692296	Seal-Dipstick Tube	676B	397931	Deflector-Muffler (Includes Spark Arrestor)
309	695550	Motor-Starter (Used Before Code Date 07052900).	525	495265	Tube-Dipstick	676D	497682	Deflector-Muffler (For TUV)
309A	795092	Motor-Starter (Used After Code Date 07052800).	529	691923	Grommet	677	690661	Screw (Muffler Deflector)
310	692327	Bolt (Starter Motor)	544	690786	Armature-Starter	684	690345	Screw (Breather Passage Cover)
332	690662	Nut (Flywheel)	545	492919	Washer Set (Starter Motor)	689	691855	Spring-Friction
333	802574	Armature-Magneto	562	691119	Bolt (Governor Control Lever)	697	691127	Screw (Drive Cap)
334	691061	Screw (Magneto Armature)	564	691132	Screw (Control Cover)	715	691147	Screw (Shaft Stop)
337	802592S	Plug-Spark	564A	691142	Screw (Control Cover)	718	690959	Pin-Locating
346	690661	Screw (Spark Arrestor)	584	697734	Cover-Breather Passage	721	690449	Stop-Shaft
356	692390	Wire-Stop	585	★691879	Gasket-Breather Passage	741	794388	Gear-Timing (Use Without Woodruff Key)
358	497316	Gasket Set-Engine	592	690800	Nut (Rewind Starter)			----- Note -----
363	19069	Flywheel Puller	597	691696	Screw (Pawl Friction Plate)	790345	790345	Gear-Timing (Use Without Woodruff Key)
365	691688	Screw (Carburetor)	601	791850	Clamp-Hose			(Used After Code Date 07093000).
374	691074	Washer (Camshaft)	601A	691038	Clamp-Hose			----- Note -----
383	89838S	Wrench-Spark Plug	604	691757	Cover-Control	742	93941	Retainer-E Ring
404	690272	Washer (Governor Crank)	604A	691344	Cover-Control	743	691772	Gear-Drive
425A	690670	Screw (Air Cleaner Cover)	608	497680	Starter-Rewind	745	691648	Screw (Brake)
443A	692523	Screw (Air Cleaner Primer Base)	613	691340	Screw (Muffler)	783	691918	Gear-Pinion (19 Teeth) (Starter Drive)
445A	491588S	Filter-Air Cleaner Cartridge	613B	691114	Screw (Muffler)	783A	691269	Gear-Pinion (12 Teeth)
455	791960	Cup-Flywheel	615	690340	Retainer-Governor Shaft	784	795095	Cover-Starter Gear
456	692299	Plate-Pawl Friction	616	698801	Crank-Governor	785	692352	Gasket-Starter Cover
459	281505S	Plate-Ratchet	617★•270344	Seal-O Ring (Intake Manifold)		789B	696547	Harness-Wiring
474	691991	Alternator	621	692310	Switch-Stop	801	690782	Cap-Drive
505	691251	Nut (Governor Control Lever)	633	••691321	Seal-Choke/Throttle Shaft			
510	795093	Drive-Starter	633A	••693867	Seal-Choke/Throttle Shaft			
			635	66538S	Boot-Spark Plug			
			651	691660	Screw (Starter Gear Cover)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
802	695267	Cap-End (Used After Code Date 00040600). ----- Note ----- 695975 Cap-End (Used Before Code Date 00040700).	883	691881	Gasket-Exhaust	972	699392	Tank-Fuel (Plastic)
			910	691094	Stud (Alternator)	972B	699374	Tank-Fuel (Plastic)
			921	497233	Cover-Blower Housing	975	493640	Bowl-Float
803	695266	Housing-Starter (Used After Code Date 00040600). ----- Note ----- 695975 Housing-Starter (Used Before Code Date 00040700).	921A	695886	Cover-Blower Housing	976	694395	Primer-Carburetor
			922	691831	Spring-Brake	977	498261	Gasket Set-Carburetor
			923	691994	Brake	994	398067	Arrestor-Spark
			925	795403	Cover-Linkage (Used After Code Date 07072200). ----- Note -----	1005	691346	Fan-Flywheel
				690595	Cover-Linkage (Used Before Code Date 07072300).	1019	494256	Kit-Label
832B	497683	Guard-Muffler (Catalyst)	930	691919	Guard-Rewind	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
832D	499034	Guard-Muffler (Tuned)	930A	691345	Guard-Rewind	1058	277039	Operator's Manual
			935	499421	Switch-Interlock	1059	692311	Kit-Screw/Washer
836	690664	Screw (Muffler Guard)	937	691325	Spline-Starter	1095	498528	Gasket Set-Valve
836B	691147	Screw (Muffler Guard)	957A	692046	Cap-Fuel Tank (Plastic)	1119	691648	Screw (Alternator)
			957B	699985	Cap-Fuel Tank (Plastic)	1160	690345	Screw (Interlock Switch)
842	★691031	Seal-O Ring (Dipstick Tube)	958	698183	Valve-Fuel Shut Off (Plastic)	1210	498144	Pulley/Spring Assembly (Pulley)
847	692047	Dipstick/Tube Assembly	966A	496116	Base-Air Cleaner Primer	1211	498144	Pulley/Spring Assembly (Spring)
851	493880S	Terminal-Spark Plug	967A	493537S	Filter-Pre Cleaner	1319	794467	Label-Warning
853	695268	Adapter-Wire	968B	692298	Cover-Air Cleaner	1330	270962	Manual-Repair
868	697338	Seal-Valve	969	690700	Screw (Blower Housing Cover)			
869	691155	Seat-Valve (Intake)	969A	691138	Screw (Blower Housing Cover)			
870	690380	Seat-Valve (Exhaust)	970	691669	Screw (Air Cleaner Primer Bracket)			
871	262001	Bushing-Valve Guide (Exhaust) ----- Note ----- 63709 Bushing-Valve Guide						

★ Included in Engine Gasket Set-Ref. No.358.

- Included in Carburetor Overhaul Kit-Ref. No. 121.

- ♦ Included in Carburetor Gasket Set—Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**